

omega

Instruction Manual for Electric Ovens

OO651XR
OO652XR



INSTRUCTIONS FOR USE

Cooking Functions

Each type of oven is provided for various cooking systems. A system can be selected by bringing the pointer of knob to the relating symbol.

(OO651XR, OO652XR)

MODE	PRESET (°C)	TMIN (°C)	TMAX (°C)	HEATING ELEMENTS	NAME	5 FUNCTION
0					ZERO	
	-	-	-		LIGHT	
	-	-	-		DEFROST	
	190	50	250	2300	FAN FORCED	
	230	50	250	2000	FAN GRILL	
	230	50	250	2000	GRILL	

Mechanical Timer (Model: OO651XR)

The mechanical timer needs to be set to the hand  in order for the oven to function.

To set a time, rotate the timer control knob clockwise to a certain time range between 0 - 120 minutes. The timer will give an audible warning once.




Electronic Control (Model: OO652XR)

Control Panel Description

The oven control panel is made with one display and two knobs.

- Time display.
- Temperature knob.
- Mode (oven functions) knob.

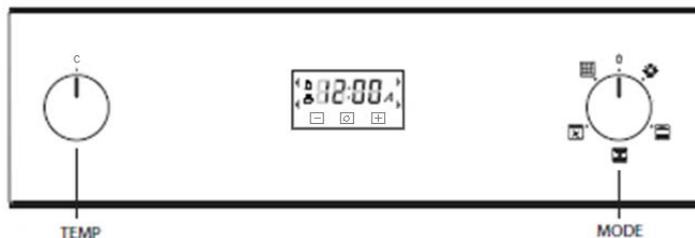

Programming time functions

At every power-up, the control shows the time of day blinking set at 12:00 as the initial value. The time increases every minute. The only possible action is the "Clock Regulation", all other oven operations are inhibited.

In general, turn the Temp/Time selector left or right in order to edit the values and modify them by steps; hold the knob on the left or right to fasten the decrease/increase operations.

Setting the time of day



Fig.1

"Auto" and "0:00" will start flashing when the unit is switched on for the first time. To set the clock, press the central button for about 3 seconds. When  appears, press "+" or "-" to set the correct time.

Wait until a beep tells you that the clock has been set (fig. 1).

To set the time at a later stage, press "+" and "-" together for 3 seconds and then adjust the clock as described above.

Minute counter



Fig.2

As this minute counter does not control the oven, when it finishes counting the oven will continue to work.

To set, press the central button for 3 seconds until  appears (fig. 2). Press "+" and "-" to set the required time.

The minute counter beeps when it finishes counting. To disable it, press any button.

To cancel the minute counter press the '-' button until the timer displays 0:00.

Cooking time



Fig. 3

This is a semi-automatic cooking function. It can be used to set cooking times. This function automatically switches the oven off after the duration is complete.

Firstly your cooking mode and temperature should be set.

Press the central button for 3 seconds. Then press it again until "dur" appears (fig. 3). Press "+" and "-" to set the required cooking timer.

The oven will work in the set mode and at the set temperature until the end of cooking time.

To cancel the cooking duration press the '-' button until the timer displays 0:00.

The end of cooking time



Fig. 4

The end of cooking time can also be set. This works as part of a programmed time.

Press the central button for 3 seconds. Press the central button twice consecutively and wait for "End" to appear (fig. 4). Press "+" and "-" to set the required end of cooking time.

The oven will work in the set mode and at the set temperature until the end of cooking time.

Setting Programming automatic cooking

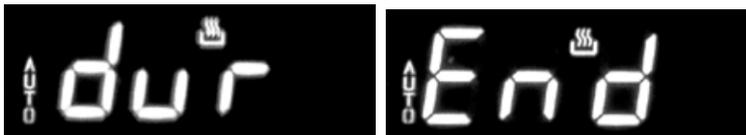


Fig. 5

Cooking function with set times

Firstly your cooking mode and temperature should be set.

Press the central button for 3 seconds. Then press it again until "dur" appears (Fig.5). Press "+" and "-" to set the required cooking time. Wait 2 seconds for the setting to be memorized.

Press the central button again, "End" will appear (fig. 4). Press "+" and "-" to set the required end of cooking time.

The oven will switch off and the word AUTO will appear in the display.

E.g.:

Current time: 12.30

Cooking time: 10 minutes

End of cooking time: 14.00

The oven will start cooking at 13.50 (14.00 less 00.10) at the set temperature and in the set mode and will stop at 14.00

The oven will beep when it stops cooking. To disable it, press any button.

Alarm Timer

You can set this timer to sound a buzzer after 0 to 60 minutes of cooking. First turn the knob fully clockwise, then turn it back to the desired alarm time

Setting an oven function manually

Turn the mode knob into the desired position, the clock display shows **On** for a few seconds. The oven will work for a maximum time (12hours). Depending on the oven model, the number and type of available functions can be different.

If the selected function works using any heating elements, the symbol is displayed (it doesn't appear in light and defrost position).

Turn the Temp & Time selector and set the desired oven temperature.

The control offers a PRESET temperature per every cooking mode or a full range between MIN and MAX to be adjusted by hand. Check the value on the display after having selected the temperature.

The temperature appears on the clock display for about 5 seconds when the Time & Temp selector is pushed or when a new function has just been selected.

As soon as the oven starts, the preheat led (indicated by the bars) on the left side of the clock display starts flashing and becomes steadily on when the preheat ends.

Turn the mode selector to ZERO (OFF) position to stop any activity, the display will show **OFF** for a few seconds.