

Panasonic[®]

Operating Instruction and Cook Book
Microwave Oven
Household Use Only

INVERTER



Model Number: NN-SF574S
NN-SF564W

Please read these instructions carefully before using this product, and save this manual for future use.

Let's Start To Use Your Oven!

1 Plug in

Plug into a properly earthed electrical outlet. "88:88" appears in the Display Window. (This will immediately cease when any pad is pressed.)

2 Open Door

Open the door and place container with food at the center of flat table. Then close the door.

 
3 Select Power Level

E.g. Med-High
Press **Micro Power** Pad twice.
(see page 11 for Micro Power chart)



4 Set Time

E.g. 13 minute 20 seconds
Press **Time** Pads




5 Press




Cooking will start.
The time in the Display Window will count down.

 Display Window

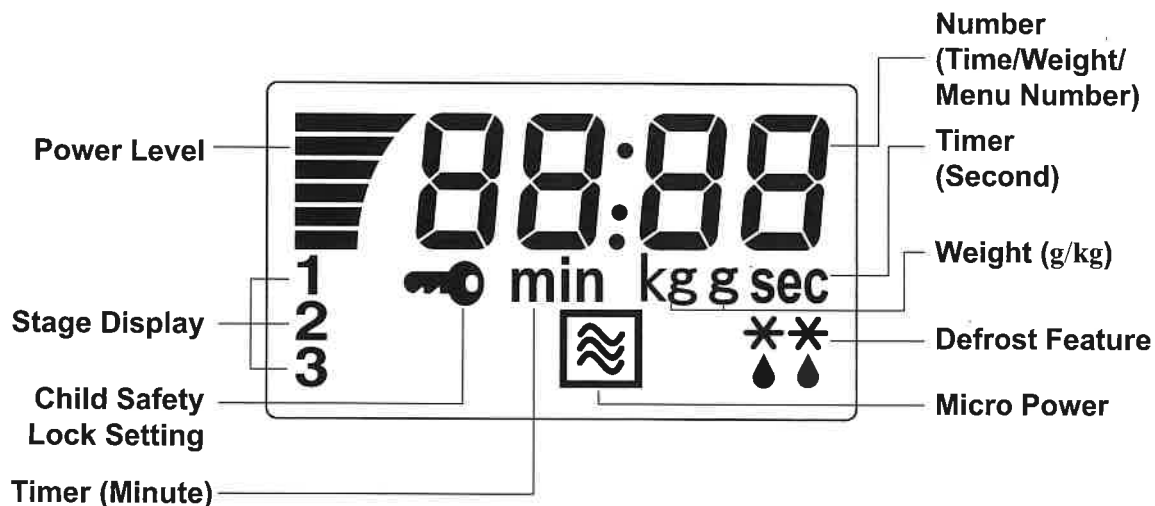

Control Panel

 * The control panel of NN-SF564W has the same key layout as NN-SF574S

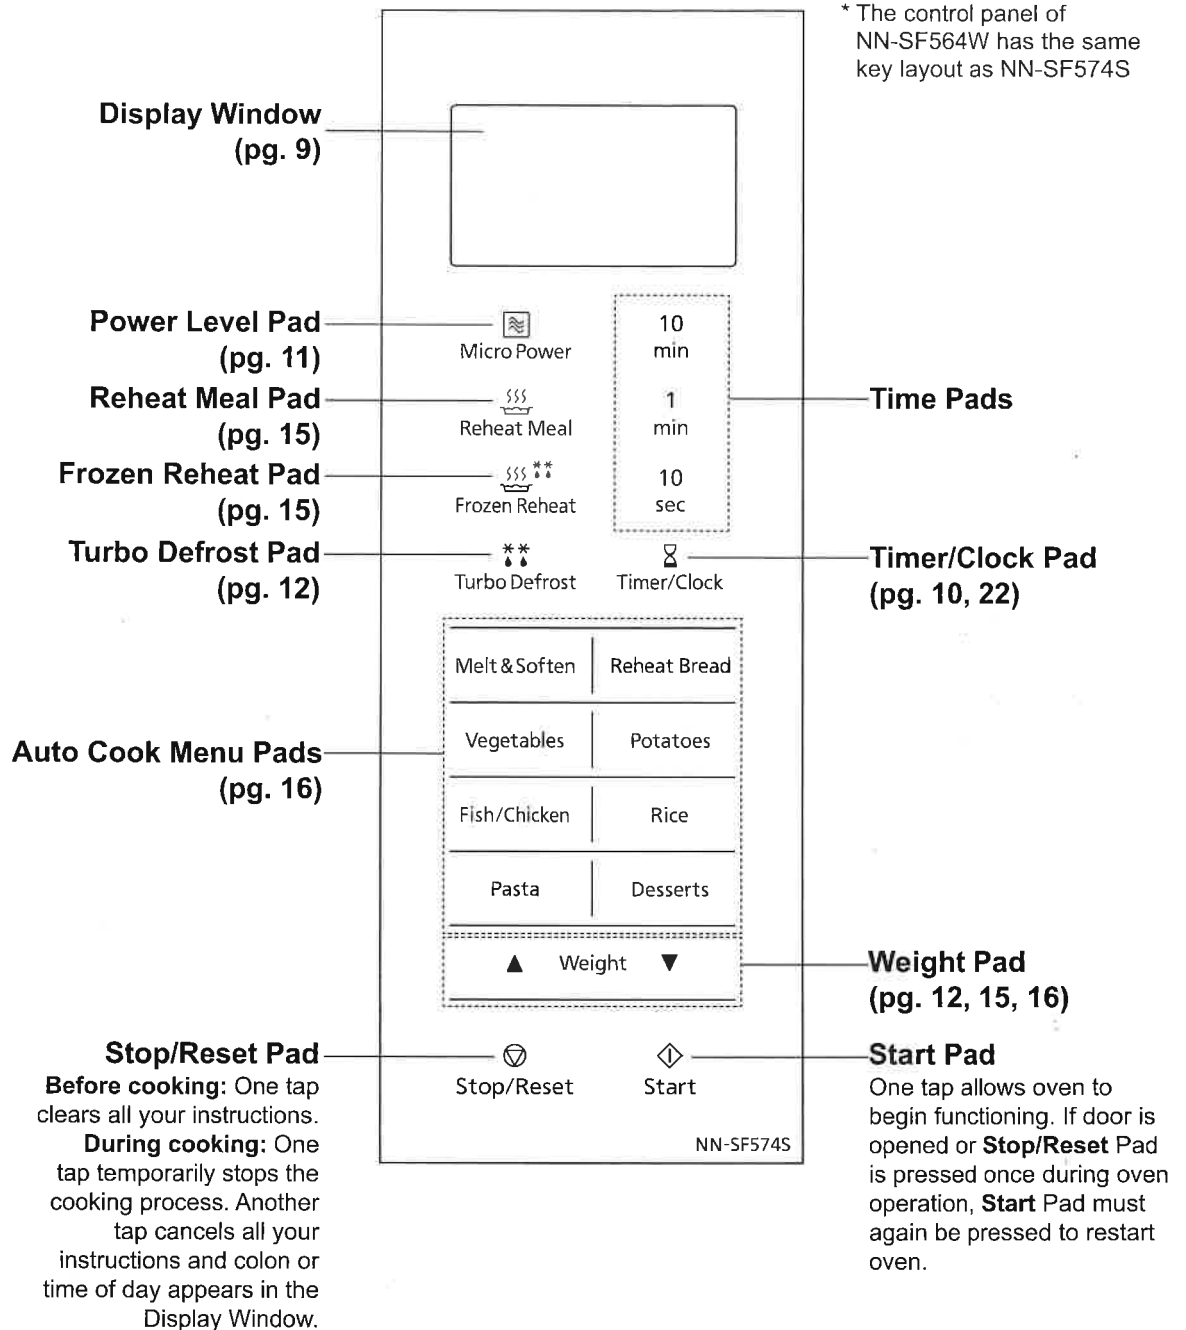

Beep Sound

When pad is pressed correctly, a beep sound will be heard. If a pad is pressed and no beep is heard, the unit does not or cannot accept the instruction. The oven will beep twice between programmed stages. At the end of any complete programme, the oven will beep five times.

NOTE:

If an operation is set and **Start** Pad is not pressed, after 6 minutes, the oven will automatically cancel the operation. The display will revert back to clock or colon mode.